



DESCRIPTION TERMINAL WIRES IN CONNECTOR

	A	B	C	D	E	F	G	H
4	RPM	CAN-L TO OBD	CAN-H TO OBD	REDUC. TEMP.	GAS TEMP.	+12V TO ACCESSORIES & IGNITION KEY	+12V GAS VALVES	+12V FROM BATTERY
3	MAP PRESSURE	MAP VACCUUM	GAS LEVEL sig.	Tx DIAG. & CONSOLE	DIAG. PORT Rx	GND ACCESSORIES	GND FROM BATTERY	GAS INJECT. +12V
2	PETROL ECU 4	LAMBDA SONDA	CONSOLE BUTTON	ISO-L TO OBD	ISO-K TO OBD	PETROL INJECT. 1	GAS INJECTOR 3	GAS INJECTOR 1
1	PETROL INJECT. 4	PETROL ECU 3	PETROL INJECT. 3	PETROL ECU 2	PETROL ECU 2	PETROL ECU 1	GAS INJECTOR 4	GAS INJECTOR 2

CONNECTOR FRONT VIEW